



SPREADER SETTINGS

Ultima

APPLICATION

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread width (m)	Cone setting	Application rate (Full rate)		Application rate (Half rate)	
			30g/m ²	35g/m ²	30g/m ²	35g/m ²
Accupro 2000 / SR-2000	2.7	5	L	M	K	K ^{1/2}
Ev-N-Spred Range	1.75	-	18	19	14	15

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place.

Nutri-Pro Fineturf

APPLICATION

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread width (m)	Cone setting	Application rate (Full rate)		Application rate (Half rate)	
			30g/m ²	35g/m ²	30g/m ²	35g/m ²
Accupro 2000 / SR-2000	3.7	5	N	O ^{1/2}	J	K
Ev-N-Spred Range	1.9	-	18	19	14	15

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place.

Nutri-Pro Outfield

APPLICATION

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread width (m)	Cone setting	Application rate	
			35g/m ² (Full rate)	35g/m ² (Half Rate)
Accupro 2000 / SR-2000	3.7	5	R	N
Ev-N-Spred Range	3.5	-	19	15

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place.

